



Periodic Maintenance Schedule Chart

Item	Interval					
	km	1 000	6 000	12 000	18 000	24 000
	miles	600	4 000	7 500	11 000	14 500
	months	2	12	24	36	48
Air cleaner element	—	I	I	R	I	I
Exhaust pipe bolts and muffler bolts	T	—	T	—	T	T
Valve clearance	—	—	—	—	—	I
Spark plug	—	I	R	I	I	R
Fuel line	—	I	I	I	I	I
Evaporative emission control system (E-33 only)	—	—	I	—	—	I
Engine oil	R	R	R	R	R	R
Engine oil filter	R	—	—	R	—	—
Final Reduction gear oil	—	—	R	—	—	R
Throttle cable play	I	I	I	I	I	I
Engine coolant	Replace every 2 years.					
Radiator hoses	—	I	I	I	I	I
Cooling fan filter	Clean every 3 000 km (1 800 miles).					
Drive V-belt	—	—	I	—	—	R
Brakes	I	I	I	I	I	I
Brake fluid	—	I	I	I	I	I
	Replace every 2 years.					
Brake hoses	—	I	I	I	I	I
	Replace every 4 years.					
Tires	—	I	I	I	I	I
Steering	I	—	I	—	—	I
Front forks	—	—	I	—	—	I
Rear suspension	—	—	I	—	—	I
Chassis bolts and nuts	T	T	T	T	T	T

NOTE:

I = Inspect and clean, adjust, replace or lubricate as necessary.

R = Replace.

T = Tighten.