


 



























Periodic Maintenance Schedule Chart


NOTE:

- **I = Inspect and clean, adjust, replace or lubricate as necessary.**
R = Replace.
T = Tighten.
- **(CA. only)** means that the item or the maintenance interval is to be applied only for the California model.

Item	months km miles	Interval				
		2	12	24	36	48
		1000	6000	12000	18000	24000
		600	4000	7500	11000	14500
Air cleaner element (I:  , R: )	—	I	I	R	I	
Exhaust pipe nuts and muffler bolts (T: )	T	—	T	—	T	
Valve clearance (I: )	—	—	—	—	I	
Spark plug (I:  , R: )	—	I	R	I	R	
Fuel hose (I:  , R: )	—	I	I	I	I	
Evaporative emission control system (if equipped) (I: )	—	—	I	—	I	
Engine oil (R: )	R	R	R	R	R	
Engine oil filter (R: )	R	—	—	R	—	
Final reduction gear oil (R: )	—	—	R	—	R	
Throttle cable play (I: )	I	I	I	I	I	
Engine coolant (R: )	—	—	R	—	R	
“SUZUKI SUPER LONG LIFE COOLANT” (Blue)	Replace every 4 years or 48000 km (29000 miles)					
“SUZUKI LONG LIFE COOLANT” (Green) or an engine coolant other than “SUZUKI SUPER LONG LIFE COOLANT” (Blue)	—	—	R	—	R	
Radiator hose (I: )	—	I	I	I	I	
Cooling fan filter (I: )	—	I	I	I	I	
Drive V belt (I:  , R: )	—	—	I	—	R	
Brakes (I: )	I	I	I	I	I	
Brake hose (I:  , R: )	—	I	I	I	I	
Brake fluid (I:  , R: )	—	I	I	I	I	
Tires (I: )	—	I	I	I	I	
Steering (I: )	I	—	I	—	I	
Front forks (I: )	—	—	I	—	I	
Rear suspension (I: )	—	—	I	—	I	
Chassis bolts and nuts (T: )	T	T	T	T	T	
Lubrication (I: )	Lubricate every 1000 km (600 miles)					