## PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Mileages are expressed in terms of kilometers, miles and time for your convenience.

NOTE:

More frequent servicing may be performed on motorcycles that are used under severe conditions.

## PERIODIC MAINTENANCE CHART

Interval   Km			T				
Item	Interval	km	1 000	6 000	12 000	18 000	24 000
Air cleaner		miles	600	4 000			
Exhaust pipe bolts and muffler bolts         T         —         T         T           Tappet clearance         —         —         —         I           Spark plugs         —         I         R         I         R           Fuel hose         —         I         R         I         R           Engine oil         R         R         R         R         R         R           Engine oil filter         R         R         R         R         R         R         R         R         R         F         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         —         R         R         R         R         R         R         R         R         R         R         R         R         R         R         R         R         R         R         R	Item	months	1	6	12	18	24
Tappet clearance	Air cleaner		_	I	l	R	l
Spark plugs	Exhaust pipe bolts and muffler bolts		Т	_	Т	_	Т
Fuel hose	Tappet clearance		_	_	_	_	I
Replace every 4 years.   Engine oil   R R R R R R R R R R R R R R R R R R	Spark plugs		_		R	I	R
Replace every 4 years.	Fuel hose		_	I	I	I	I
Engine oil filter			Replace every 4 years.				
Transmission oil         R         I         R         I         R           Final gear oil         R         —         R         —         R           CVT filter         —         —         I         —         I           Idle speed         I	Engine oil		R	R	R	R	R
Final gear oil   R	Engine oil filter		R	_	_	R	_
CVT filter         —         —         I         —         I	Transmission oil		R	I	R	I	R
Idle speed	Final gear oil		R	_	R	_	R
Throttle cable play	CVT filter		_		I	_	I
Throttle valve synchronization         I E-33 only         — I — I           Evaporative emission control system E-33 (California) model only         — — I — I           PAIR (air supply) system         — — I — I           Engine coolant         Replace every 2 years.           Radiator hose         — I I I I I           Brakes         I I I I I I           Brake hose         — I I I I I I           Brake fluid         Replace every 4 years.           Tires         — I I I I I I I	Idle speed		I	I	I	l	I
Throttle valve synchronization	Throttle cable play		I		I	I	I
Evaporative emission control system         —	Throttle valve synchronization		'	_	I	_	I
E-33 (California) model only   Replace vapor hose every 4 years.	Evaporative emission control system		_	_	l	_	I
Engine coolant   Replace every 2 years.			Replace vapor hose every 4 years.				
Radiator hose	PAIR (air supply) system		_	_	I	_	I
Brake hose			Replace every 2 years.				
-	Radiator hose		_	I	I	I	I
Replace every 4 years.	Brakes		I	I	I	I	I
Replace every 4 years.	Brake hose		_	I	I	I	I
Brake fluid   Replace every 2 years.   Tires			Replace every 4 years.				
Replace every 2 years.   Tires   I   I   I   I	Brake fluid		_	I	I	I	I
			Replace every 2 years.				
Steering I — I — I			_	I	ı	I	I
			I		I	_	I
Front forks — — I — I	Front forks				I	_	l l
Rear suspension — — I — I	·		_	_	I	_	I
Chassis bolts and nuts T T T T	Chassis bolts and nuts		Т	Т	Т	Т	Т

NOTE:

I=Inspect and clean, adjust, replace or lubricate as necessary;

R=Replace; T=Tighten