

 
 



 


 
 


 





 

 

 


 










Periodic Maintenance Schedule Chart

NOTE:

- **I = Inspect and clean, adjust, replace or lubricate as necessary.**
- **R = Replace.**
- **T = Tighten.**
- **(CA. only) means that the item or the maintenance is to be applied for the California model.**

For Europe and Oceania Countries

Item	Interval					
	months	2	12	24	36	48
	km	1000	12000	24000	36000	48000
	miles	600	7500	15000	22500	30000
Air cleaner element (I:  , R: )	—	I	I	R	I	
Exhaust pipe bolts and muffler bolts (T: )	T	T	T	T	T	
Exhaust control valve (I: )	I	—	I	—	I	
Valve clearance (I: )	Inspect every 24000 km (15000 miles).					
Spark plugs (I:  , R: )	—	R	R	R	R	
Fuel line (I:  , R: )	—	I	I	I	R	
Engine oil (R: )	R	R	R	R	R	
Engine oil filter (R: )	R	—	R	—	R	
Idle speed (I: )	I	I	I	I	I	
Throttle cable play (I: )	I	I	I	I	I	
Throttle valve synchronization (I: )	—	I	I	I	I	
EVAP control system (If equipped) (I:  , R: )	—	I	I	I	I	
Cooling system	Replace vapor hose every 4 years.					
Engine coolant (R: )	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	—	R	
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	R	R	
Radiator hose (I: )	—	I	I	I	I	
Clutch hose (I:  , R: )	Replace every 4 years.					
	—	I	I	I	I	
Clutch fluid (I:  , R: )	Replace every 2 years.					
	—	I	I	I	I	
Drive chain (I:  , I: )	Clean and lubricate every 1000 km (600 miles).					
	I	I	I	I	I	
Brakes (I: )	—	I	I	I	I	
Brake hose (I:  , R: )	Replace every 4 years.					
	—	I	I	I	I	

Brake fluid (I:  , R: )	Inspect every year or 6000 km. Replace every 2 years.				
Tires (I: )	—	I	I	I	I
Steering (I: )	I	I	I	I	I
Front forks (I: )	—	I	I	I	I
Rear suspension (I: )	—	I	I	I	I
Chassis bolts and nuts (T:)	T	T	T	T	T
Lubrication (I: )	Lubricate at every 1000 km (600 miles).				

