
































0B

Periodic Maintenance Schedule Chart


NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

Item	months km miles	Interval			
		2	12	24	36
		1000	5000	10000	15000
		600	3000	6000	9000
Air cleaner element (I:  , R: )		—	I	I	R
Exhaust pipe bolts and muffler mounting bolts (T: )		T	—	T	—
Valve clearance (I: )		I	I	I	I
Spark plugs (I:  , R: )		—	I	R	I
Fuel hose (I:  , R: )		—	I	I	I
		Replace every 4 years			
Evaporative emission control system (I: )		—	—	I	—
Engine oil (R: )		R	R	R	R
Engine oil filter (R: )		R	—	R	—
Idle speed (I: )		I	I	I	I
Throttle cable play (I: )		I	I	I	I
PAIR (air supply) system (I: )		—	I	—	I
Throttle valve synchronization (I: )		—	—	I	—
		Replace every 4 years or 20000 km (12000 miles)			
Engine coolant (R: )				R	—
		"SUZUKI SUPER LONG LIFE COOLANT" (Blue)			
		"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)			
Radiator hose (I: )		—	I	I	I
Clutch cable play (I: )		—	I	I	I
		I	I	I	I
Drive chain (I:  , I: )		Clean and lubricate every 1000 km (600 miles)			
Brakes (I: )		I	I	I	I
Brake fluid (I:  , R: )		—	I	I	I
		Replace every 2 years			
Brake hose (I:  , R: )		—	I	I	I
		Replace every 4 years			
Tires (I: )		—	I	I	I
Steering (I: )		I	—	I	—
		—	—	I	—

Front forks (I: )				
Rear suspension (I: )	—	—	I	—
Chassis bolts and nuts (T: )	T	T	T	T
Lubrication (I: )	Lubricate every 1000 km (600 miles)			