



Periodic Maintenance Schedule Chart

NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

– L4

Item		Interval					
		months	2	12	24	36	48
		km	1 000	6 000	12 000	18 000	24 000
		miles	600	4 000	7 500	11 000	14 500
Air cleaner element		—	I	I	R	I	
Exhaust pipe bolts and muffler bolts		T	T	T	T	T	
Valve clearance		—	—	—	—	I	
Spark plugs		—	I	R	I	R	
Fuel line		—	I	I	I	I	
Evaporative emission control system (E-33 only)		—	—	I	—	I	
Engine oil		R	R	R	R	R	
Engine oil filter		R	—	—	R	—	
Throttle cable play		I	I	I	I	I	
Throttle valve synchronization		I (E-33 only)	—	I	—	I	
Engine coolant	SUZUKI SUPER LONG LIFE COOLANT (BLUE)	—	—	—	—	R	
	SUZUKI LONG LIFE COOLANT (GREEN) or an engine coolant other than SUZUKI SUPER LONG LIFE COOLANT (BLUE)	—	—	R	—	R	
Radiator hose		—	I	I	I	I	
Clutch cable play		—	I	I	I	I	
Drive chain		I	I	I	I	I	
Clean and lubricate every 1 000 km (600 miles).							
Brakes		I	I	I	I	I	
Brake fluid		—	I	I	I	I	
Replace every 2 years.							
Brake hose		—	I	I	I	I	
Replace every 4 years.							
Tires		—	I	I	I	I	
Steering		I	—	I	—	I	
Front forks		—	—	I	—	I	
Rear suspension		—	—	I	—	I	
Chassis bolts and nuts		T	T	T	T	T	

L5 –

For Europe and Oceania countries

Item	Interval				
	months	2	12	24	36

		km	1 000	12 000	24 000	36 000	48 000
		miles	600	7 500	15 000	22 500	30 000
Air cleaner element			—	I	I	R	I
Exhaust pipe bolts and muffler bolts			T	T	T	T	T
Valve clearance			Inspect every 24 000 km (15 000 miles).				
Spark plugs			—	R	R	R	R
Fuel hose			—	I	I	I	I
Engine oil			R	R	R	R	R
Engine oil filter			R	—	R	—	R
Throttle cable play			I	I	I	I	I
Throttle valve synchronization			—	I	I	I	I
Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (BLUE)		—	—	—	—	R
	"SUZUKI LONG LIFE COOLANT" (GREEN) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (BLUE)		—	—	R	—	R
Radiator hose			—	I	I	I	I
Clutch cable play			—	I	I	I	I
Drive chain			I	I	I	I	I
			Clean and lubricate every 1 000 km (600 miles).				
Brakes			I	I	I	I	I
Brake fluid			Inspect every year or 6 000 km (4 000 miles). Replace every 2 years.				
Brake hose			—	I	I	I	I
			Replace every 4 years.				
Tires			—	I	I	I	I
Steering			I	I	I	I	I
Front forks			—	I	I	I	I
Rear suspension			—	I	I	I	I
Chassis bolts and nuts			T	T	T	T	T
Lubrication			Lubricate at every 1 000 km (600 miles).				
Spoke wheels			I	I	I	I	I