




Periodic Maintenance Schedule Chart


NOTE:
























- **I = Inspect and clean, adjust, replace or lubricate as necessary.**
R = Replace.
T = Tighten.
- **(U.S.A. only)** means that the item or the maintenance interval is to be applied only for the U.S.A. model.


For Europe and Oceania Countries

Item		Interval					
		months	2	12	24	36	48
		km	1000	12000	24000	36000	48000
		miles	600	7500	15000	22500	30000
Air cleaner element	polyester foam element	Clean every 12000 km (7500 miles)					
	non woven element	—	I	I	R	I	
Exhaust pipe bolts and muffler bolts		T	—	T	—	T	
Valve clearance		Inspect every 24000 km (15000 miles)					
Spark plugs		—	R	R	R	R	
Fuel hose		—	I	I	I	I	
		Replace every 4 years					
Evaporative emission control system (if equipped)		—	—	I	—	I	
Engine oil		R	R	R	R	R	
Engine oil filter		R	—	R	—	R	
PAIR (air supply) system		—	—	I	—	I	
Throttle valve synchronization		—	I	I	I	I	
Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	—	—	R	
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	R	—	R	
Radiator hose		—	I	I	I	I	
Clutch cable play		—	I	I	I	I	
Drive chain		I	I	I	I	I	
		Clean and lubricate every 1000 km (600 miles)					
Brakes		I	I	I	I	I	
Brake fluid		Inspect every year or 6000 km (3750 miles) Replace every 2 years					
Brake hose		—	I	I	I	I	
		Replace every 4 years					
Tires		—	I	I	I	I	
Steering		I	I	I	I	I	
Front forks		—	I	I	I	I	
Rear suspension		—	I	I	I	I	

Chassis bolts and nuts 	T	T	T	T	T
Lubrication 	Lubricate every 1000 km (600 miles)				
Spoke wheel 	I	I	I	I	I

Except for Europe and Oceania Countries

Item		Interval					
		months	2	12	24	36	48
		km	1000	6000	12000	18000	24000
		miles	600	3750	7500	11250	15000
Air cleaner element 	polyester foam element	Clean every 6000 km (3750 miles)					
	non woven element	—	I	I	R	I	
Exhaust pipe bolts and muffler bolts 		T	—	T	—	T	
Valve clearance 		—	—	—	—	I	
Spark plugs 		—	I	R	I	R	
Fuel hose 		—	I	I	I	I	
		Replace every 4 years (Except for Canada)					
Evaporative emission control system (if equipped) 		—	—	I	—	I	
Engine oil 		R	R	R	R	R	
Engine oil filter 		R	—	—	R	—	
PAIR (air supply) system 		—	—	I	—	I	
Throttle valve synchronization 		I (U.S.A. only)	—	I	—	I	
Engine coolant 	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 4 years or 48000 km (30000 miles)					
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	R	—	R	
Radiator hose 		—	I	I	I	I	
Clutch cable play 		—	I	I	I	I	
Drive chain 		I	I	I	I	I	
		Clean and lubricate every 1000 km (600 miles)					
Brakes 		I	I	I	I	I	
Brake fluid 		—	I	I	I	I	
		Replace every 2 years					
Brake hose 		—	I	I	I	I	
		Replace every 4 years					
Tires 		—	I	I	I	I	
Steering 		I	—	I	—	I	
Front forks 		—	—	I	—	I	
Rear suspension 		—	—	I	—	I	
Chassis bolts and nuts 		T	T	T	T	T	
Lubrication 		Lubricate every 1000 km (600 miles)					

Spoke wheel 

I

I

I

I

I