



Periodic Maintenance Schedule Chart

NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

- L4

Item	Interval					
	months	2	12	24	36	48
	km	1 000	6 000	12 000	18 000	24 000
	miles	600	4 000	7 500	11 000	14 500
Air cleaner element	—	I	I	R	I	
Exhaust pipe bolts, muffler bolts and nut	T	—	T	—	T	
Valve clearance	—	—	—	—	I	
Spark plugs	—	I	R	I	R	
Fuel line	—	I	I	I	I	
Evaporative emission control system (E-33 only)	—	—	I	—	I	
Engine oil	R	R	R	R	R	
Engine oil filter	R	—	—	R	—	
Throttle cable play	I	I	I	I	I	
Throttle valve synchronization	I (E-33 only)	—	I	—	I	
PAIR (air supply) system	—	—	I	—	I	
Engine coolant	Replace every 2 years.					
Radiator hose	—	I	I	I	I	
Clutch hose	—	I	I	I	I	
Clutch fluid	Replace every 4 years.					
	—	I	I	I	I	
Drive chain	Replace every 2 years.					
	I	I	I	I	I	
Brakes	Clean and lubricate every 1 000 km (600 miles).					
	I	I	I	I	I	
Brake hose	—	I	I	I	I	
	Replace every 4 years.					
Brake fluid	—	I	I	I	I	
	Replace every 2 years.					
Tires	—	I	I	I	I	
Steering	I	—	I	—	I	
Front forks	—	—	I	—	I	
Rear suspension	—	—	I	—	I	
Chassis bolts and nuts	T	T	T	T	T	

L5 -

For Europe and Oceania countries

Item	Interval					
	months	2	12	24	36	48

		km	1 000	12 000	24 000	36 000	48 000
		miles	600	7 500	15 000	22 500	30 000
Air cleaner element			—	I	I	R	I
Exhaust pipe bolts and muffler bolts			T	T	T	T	T
Valve clearance			Inspect every 24 000 km (15 000 miles).				
Spark plugs			—	R	R	R	R
Fuel hose			—	I	I	I	I
Engine oil			R	R	R	R	R
Engine oil filter			R	—	R	—	R
Throttle cable play			I	I	I	I	I
PAIR (air supply) system			—	—	I	—	I
Throttle valve synchronization			—	I	I	I	I
Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)		—	—	—	—	R
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)		—	—	R	—	R
Radiator hose			—	I	I	I	I
Clutch hose			—	I	I	I	I
			Replace every 4 years.				
Clutch fluid			—	I	I	I	I
			Replace every 2 years.				
Drive chain			I	I	I	I	I
			Clean and lubricate every 1 000 km (600 miles).				
Brakes			I	I	I	I	I
Brake hose			—	I	I	I	I
			Replace every 4 years.				
Brake fluid			Inspect every year or 6 000 km (4 000 miles). Replace every 2 years.				
Tires			—	I	I	I	I
Steering			I	I	I	I	I
Front forks			—	I	I	I	I
Rear suspension			—	I	I	I	I
Chassis bolts and nuts			T	T	T	T	T
Lubrication			Lubricate every 1 000 km (600 miles).				