








Periodic Maintenance Schedule Chart


NOTE:

- **I = Inspect and clean, adjust, replace or lubricate as necessary.**
R = Replace.
T = Tighten.
- **(U.S.A. only)** means that the item or the maintenance is to be applied for the U.S.A. model.
- **(Except for U.S.A. (- M2))** means that the item or the maintenance interval is to be applied except for the U.S.A. model.
- **(Except for U.S.A. and Canada (M3 -))** means that the item or the maintenance interval is to be applied except for the U.S.A. and Canada models.

For Europe and Oceania countries

Item	Interval					
	months	2	12	24	36	48
	km	1000	12000	24000	36000	48000
	miles	600	7500	15000	22500	30000
Air cleaner element	—	I	I	R	I	
Exhaust pipe bolts and muffler bolts	T	T	T	T	T	
Valve clearance	Inspect every 24000 km (15000 miles)					
Spark plugs	—	R	R	R	R	
Fuel hose	—	I	I	I	I	
Evaporative emission control system (If equipped)	Replace every 4 years					
Evaporative emission control system (If equipped)	—	—	I	—	I	
Engine oil	R	R	R	R	R	
Engine oil filter	R	—	R	—	R	
Throttle cable play	I	I	I	I	I	
PAIR (air supply) system	—	—	I	—	I	
Throttle bore cleaning	—	I	I	I	I	
Throttle valve synchronization	—	I	I	I	I	
Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	—	—	R
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	R	—	R
Radiator hose	—	I	I	I	I	
Clutch fluid	—	I	I	I	I	
	Replace every 2 years					
Clutch hose	—	I	I	I	I	
	Replace every 4 years					
Drive chain	I	I	I	I	I	
	Clean and lubricate every 1000 km (600 miles)					
Brakes	I	I	I	I	I	
Brake fluid	Inspect every year or 6000 km (3750 miles)					

	Replace every 2 years				
Brake hose 	—	I	I	I	I
	Replace every 4 years				
Tires 	—	I	I	I	I
Steering 	I	I	I	I	I
Front forks 	—	I	I	I	I
Rear suspension 	—	I	I	I	I
Chassis bolts and nuts 	T	T	T	T	T
Lubrication 	Lubricate at every 1000 km (600 miles)				