



## Periodic Maintenance Schedule Chart

**NOTE:**
**I = Inspect and clean, adjust, replace or lubricate as necessary.**
**R = Replace.**
**T = Tighten.**

Item	Interval					
	km	1 000	6 000	12 000	18 000	24 000
	miles	600	4 000	7 500	11 000	14 500
	months	2	12	24	36	48
Air cleaner element	—	I	I	R	I	I
Exhaust pipe bolts and muffler bolts	T	—	T	—	T	T
Valve clearance	—	—	—	—	I	I
Spark plugs	—	I	R	I	R	R
Fuel line	—	I	I	I	I	I
Engine oil	R	R	R	R	R	R
Engine oil filter	R	—	—	R	—	—
Throttle cable play	I	I	I	I	I	I
Throttle valve synchronization	I (E-33 only)	—	I	—	I	I
Evaporative emission control system (E-33 only)	—	—	I	—	I	I
PAIR (air supply) system	—	—	I	—	I	I
Engine coolant	Replace every 2 years.					
Radiator hoses	—	I	I	I	I	I
Clutch fluid	—	I	I	I	I	I
Clutch hose	Replace every 2 years.					
Clutch hose	—	I	I	I	I	I
Clutch hose	Replace every 4 years.					
Drive chain	I	I	I	I	I	I
Drive chain	Clean and lubricate every 1 000 km (600 miles).					
Brakes	I	I	I	I	I	I
Brake fluid	—	I	I	I	I	I
Brake fluid	Replace every 2 years.					
Brake hoses	—	I	I	I	I	I
Brake hoses	Replace every 4 years.					
Tires	—	I	I	I	I	I
Steering	I	—	I	—	I	I
Front forks	—	—	I	—	I	I
Rear suspension	—	—	I	—	I	I
Chassis bolts and nuts	T	T	T	T	T	T