

Periodic Maintenance Schedule Chart


NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

L3 – L4

Item	months km miles	Interval				
		2	12	24	36	48
		1 000	6 000	12 000	18 000	24 000
		600	4 000	7 500	11 000	14 500
Air cleaner element	—	I	I	R	I	
Exhaust pipe bolts and muffler bolts	T	—	T	—	T	
Valve clearance	—	—	—	—	I	
Spark plugs	—	I	R	I	R	
Fuel line	—	I	I	I	I	
Engine oil	R	R	R	R	R	
Engine oil filter	R	—	—	R	—	
Throttle cable play	I	I	I	I	I	
Throttle valve synchronization	I (E-33 only)	—	I	—	I	
Evaporative emission control system(if equipped)	—	—	I	—	I	
PAIR (air supply) system	—	—	I	—	I	
Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 4 years or 48 000 km (29 000 miles)				
Engine coolant	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	R	—	R
Radiator hoses	—	I	I	I	I	
Clutch fluid	—	I	I	I	I	
Clutch hose	—	I	I	I	I	
Drive chain	I	I	I	I	I	
Brakes	I	I	I	I	I	
Brake fluid	—	I	I	I	I	
Brake hoses	—	I	I	I	I	
Tires	—	I	I	I	I	
Steering	I	—	I	—	I	
Front forks	—	—	I	—	I	
Rear suspension	—	—	I	—	I	
Chassis bolts and nuts		T	T	T	T	T

L5 –

For Europe and Oceania countries

Item	Interval					
	months	2	12	24	36	48
	km	1 000	12 000	24 000	36 000	48 000
	miles	600	7 500	15 000	22 500	30 000
Air cleaner element	—	I	I	R	I	
Exhaust pipe bolts and muffler bolts	T	T	T	T	T	
Valve clearance	Inspect every 24 000 km (15 000 miles).					
Spark plugs	—	R	R	R	R	
Fuel line	—	I	I	I	I	
Engine oil	R	R	R	R	R	
Engine oil filter	R	—	R	—	R	
Throttle cable play	I	I	I	I	I	
Throttle valve synchronization	—	I	I	I	I	
Evaporative emission control system (if equipped)	—	—	I	—	I	
PAIR (air supply) system	—	—	I	—	I	
Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	—	—	R
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	R	—	R
Radiator hoses	—	I	I	I	I	
Clutch fluid	—	I	I	I	I	
Clutch hose	Replace every 2 years.					
	—	I	I	I	I	
	Replace every 4 years.					
	I	I	I	I	I	
Drive chain	Clean and lubricate every 1 000 km (600 miles).					
Brakes	I	I	I	I	I	
Brake fluid	Inspect every year or 6 000 km (4 000 miles).					
	Replace every 2 years.					
Brake hoses	—	I	I	I	I	
	Replace every 4 years.					
Tires	—	I	I	I	I	
Steering	I	I	I	I	I	
Front forks	—	I	I	I	I	
Rear suspension	—	I	I	I	I	
Chassis bolts and nuts	T	T	T	T	T	
Lubrication	Lubricate at every 1 000 km (600 miles).					