

Periodic Maintenance Schedule Chart


NOTE:
























- **I = Inspect and clean, adjust, replace or lubricate as necessary.**
R = Replace.
T = Tighten.
- **(U.S.A. only)** means that the item or the maintenance interval is to be applied only for the U.S.A. model.

For Europe and Oceania Countries

| Item | | Interval | | | | | |
|--------------------------------------|--|---|------|-------|-------|-------|-------|
| | | months | 2 | 12 | 24 | 36 | 48 |
| | | km | 1000 | 12000 | 24000 | 36000 | 48000 |
| | | miles | 600 | 7500 | 15000 | 22500 | 30000 |
| Air cleaner element | Polyester foam element | Clean every 12000 km (7500 miles) | | | | | |
| | Non woven element | — | I | I | R | I | |
| Exhaust pipe bolts and muffler bolts | | T | — | T | — | T | |
| Valve clearance | | Inspect every 24000 km (15000 miles) | | | | | |
| Spark plugs | | — | R | R | R | R | |
| Fuel hose | | — | I | I | I | I | |
| | | Replace every 4 years | | | | | |
| Evaporative emission control system | | — | — | I | — | I | |
| Engine oil | | R | R | R | R | R | |
| Engine oil filter | | R | — | R | — | R | |
| PAIR (air supply) system | | — | — | I | — | I | |
| Throttle valve synchronization | | — | I | I | I | I | |
| Engine coolant | "SUZUKI SUPER LONG LIFE COOLANT" (Blue) | — | — | — | — | R | |
| | "SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue) | — | — | R | — | R | |
| Radiator hose | | — | I | I | I | I | |
| Clutch cable play | | — | I | I | I | I | |
| Drive chain | | I | I | I | I | I | |
| | | Clean and lubricate every 1000 km (600 miles) | | | | | |
| Brakes | | I | I | I | I | I | |
| Brake hose | | — | I | I | I | I | |
| | | Replace every 4 years | | | | | |
| Brake fluid | | Inspect every year or 6000 km (3750 miles) Replace every 2 years | | | | | |
| Tires | | — | I | I | I | I | |
| Steering | | I | I | I | I | I | |
| Front forks | | — | I | I | I | I | |
| Rear suspension | | — | I | I | I | I | |

| | | | | | |
|---|-------------------------------------|---|---|---|---|
| Chassis bolts and nuts  | T | T | T | T | T |
| Lubrication  | Lubricate every 1000 km (600 miles) | | | | |

Except for Europe and Oceania Countries

| Item | | Interval | | | | | |
|--|--|---|------|------|-------|-------|-------|
| | | months | 2 | 12 | 24 | 36 | 48 |
| | | km | 1000 | 6000 | 12000 | 18000 | 24000 |
| | | miles | 600 | 3750 | 7500 | 11250 | 15000 |
| Air cleaner element  | Polyester foam element | Clean every 6000 km (3750 miles) | | | | | |
| | Non woven element | — | I | I | R | I | |
| Exhaust pipe bolts and muffler bolts  | | T | — | T | — | T | |
| Valve clearance  | | — | — | — | — | I | |
| Spark plugs  | | — | I | R | I | R | |
| Fuel hose  | | — | I | I | I | I | |
| | | Replace every 4 years (Except for Canada) | | | | | |
| Evaporative emission control system  | | — | — | I | — | I | |
| Engine oil  | | R | R | R | R | R | |
| Engine oil filter  | | R | — | — | R | — | |
| PAIR (air supply) system  | | — | — | I | — | I | |
| Throttle valve synchronization  | | I (U.S.A. only) | — | I | — | I | |
| Engine coolant  | "SUZUKI SUPER LONG LIFE COOLANT" (Blue) | Replace every 4 years or 48000 km (30000 miles) | | | | | |
| | "SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue) | — | — | R | — | R | |
| Radiator hose  | | — | I | I | I | I | |
| Clutch cable play  | | — | I | I | I | I | |
| Drive chain  | | I | I | I | I | I | |
| | | Clean and lubricate every 1000 km (600 miles) | | | | | |
| Brakes  | | I | I | I | I | I | |
| Brake hose  | | — | I | I | I | I | |
| | | Replace every 4 years | | | | | |
| Brake fluid  | | — | I | I | I | I | |
| | | Replace every 2 years | | | | | |
| Tires  | | — | I | I | I | I | |
| Steering  | | I | — | I | — | I | |
| Front forks  | | — | — | I | — | I | |
| Rear suspension  | | — | — | I | — | I | |
| Chassis bolts and nuts  | | T | T | T | T | T | |
| Lubrication  | | Lubricate every 1000 km (600 miles) | | | | | |