



Periodic Maintenance Schedule Chart

NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

Item		Interval					
		km	1 000	6 000	12 000	18 000	24 000
		miles	600	4 000	7 500	11 000	14 500
		months	2	12	24	36	48
Air cleaner element		—	I	I	R	I	
Exhaust pipe bolts and muffler bolts		T	—	T	—	T	
Exhaust control valve		I	—	I	—	I	
Valve clearance		—	—	—	—	I	
Spark plugs		—	I	R	I	R	
Fuel line		—	I	I	I	I	
Evaporative emission control system (E-14, 33)		—	—	I	—	I	
Engine oil		R	R	R	R	R	
Engine oil filter		R	—	—	R	—	
Throttle cable play		I	I	I	I	I	
PAIR (air supply) system		—	—	I	—	I	
Throttle valve synchronization		I (E-14, 33)	—	I	—	I	
Engine coolant	SUZUKI SUPER LONG LIFE COOLANT (BLUE)	—	—	—	—	R	
	SUZUKI LONG LIFE COOLANT (GREEN) or an engine coolant other than SUZUKI SUPER LONG LIFE COOLANT (BLUE)	—	—	R	—	R	
Radiator hose		—	I	I	I	I	
Clutch cable play		—	I	I	I	I	
Drive chain		I	I	I	I	I	
Clean and lubricate every 1 000 km (600 miles).							
Brakes		I	I	I	I	I	
Brake fluid		—	I	I	I	I	
Replace every 2 years.							
Brake hoses		—	I	I	I	I	
Replace every 4 years.							
Tires		—	I	I	I	I	
Steering		I	—	I	—	I	
Front fork		—	—	I	—	I	
Rear suspension		—	—	I	—	I	
Chassis bolts and nuts		T	T	T	T	T	