



























Periodic Maintenance Schedule Chart

NOTE:

- **I = Inspect and clean, adjust, replace or lubricate as necessary.**
R = Replace.
T = Tighten.
- **(CA. only)** means that the item or the maintenance interval is to be applied only for the California model.


For Europe and Oceania Countries

Item	months	Interval					
		km	2	12	24	36	48
		miles	1000	12000	24000	36000	48000
		600	7500	15000	22500	30000	
Air cleaner element (I:  , R: )		—	I	I	R	I	
Exhaust pipe bolts and muffler bolts (T: )		T	T	T	T	T	
Exhaust control valve (I: )		I	Inspect every 6000 km (4000 miles).				
Valve clearance (I: )		Inspect every 24000 km (15000 miles).					
Spark plugs (I:  , R: )		Replace every 12000 km (7500 miles).					
Fuel hose (I: )		—	I	I	I	I	
Evaporative emission control system (If equipped) (I: )		Replace every 4 years.					
		—	—	I	—	I	
Engine oil (R: )		R	Replace every year or 6000 km (4000 miles).				
Engine oil filter (R: )		R	Replace every 2 years or 12000 km (7500 miles).				
Throttle cable play (I: )		I	I	I	I	I	
PAIR (air supply) system (I: )		—	—	I	—	I	
Throttle valve synchronization (I: )		—	I	I	I	I	
Engine coolant (R: )		—	—	—	—	R	
		—	—	R	—	R	
		—	—	—	—	R	
Radiator hose (I: )		—	I	I	I	I	
Clutch cable play (I: )		—	I	I	I	I	
Drive chain (I:  , I: )		I	Inspect every 6000 km (4000 miles).				
		Clean and lubricate every 1000 km (600 miles).					
Brakes (I: )		I	I	I	I	I	
Brake hose (I:  , R: )		—	I	I	I	I	
		Replace every 4 years.					


Brake fluid (I: , R: )

Inspect every year or 6000 km (4000 miles).

Replace every 2 years.

Tires (I: )


— I I I I

Steering (I: )


I I I I I

Front forks (I: )


— I I I I

Rear suspension (I: )

— I I I I

Chassis bolts and nuts (T: )

T T T T T

Lubrication (I: )

Lubricate every 1000 km (600 miles).