

Periodic Maintenance Schedule Chart


NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

Item	Interval			
	months	2	12	24
	km	1000	4000	8000
	miles	600	2500	5000
Air cleaner element (I: ) , R: )		—	I	I
		Replace every 12000 km (7500 miles).		
Exhaust pipe bolt and muffler bolt (T: )		T	—	T
Valve clearance (I: )		—	—	I
Spark plug (I: ) , (R: )		—	I	R
Fuel hose (I: ) , (R: )		—	I	I
		Replace every 4 years.		
Evaporative emission control system (if equipped) (I: )		—	—	I
Engine oil (R: )		R	R	R
Engine oil filter (R: )		R	—	R
Throttle cable play (I: )		I	I	I
Pair (air supply) system (if equipped) (I: )		—	I	I
Engine coolant (R: )	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 4 years or 16000 km (10000 miles).		
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 2 years or 8000 km (5000 miles).		
Radiator hose (I: )		—	I	I
Clutch cable play (I: )		I	I	I
Drive chain (I: ) , I: )		I	I	I
		Clean and lubricate every 1000 km (600 miles).		
Brake (I: )		I	I	I
Brake hose (I: ) , R: )		—	I	I
		Replace every 4 years.		
Brake fluid (I: ) , R: )		—	I	I
		Replace every 2 years.		
Tires (I: )		—	I	I
Steering (I: )		I	—	I
Front forks (I: )		—	—	I
Rear suspension (I: )		—	—	I
Chassis bolts and nuts (T: )		T	T	T
Lubrication (I: )		Lubricate every 1000 km (600 miles).		