

PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Mileages are expressed in terms of kilometers, miles and time for your convenience.

IMPORTANT (For E-28): The periodic maintenance intervals and service requirements have been established in accordance with EPA regulations. Following these instructions will ensure that the motorcycle will not exceed emission standards and it will also ensure the reliability and performance of the motorcycle.

NOTE:

More frequent servicing may be required on motorcycles that are used under severe conditions.

PERIODIC MAINTENANCE CHART

Item	Interval	miles	600	4 000	7 500	11 000	14 500
		km	1 000	6 000	12 000	18 000	24 000
		months	2	12	24	36	48
Air cleaner element		—	I	I	R	I	
Spark plugs		—	I	R	I	R	
Valve clearance		—	—	—	—	I	
Exhaust control valve		I	—	I	—	I	
Engine oil		R	R	R	R	R	
Engine oil filter		R	—	—	R	—	
Fuel line		—	I	I	I	I	
Idle speed		I	I	I	I	I	
Throttle valve synchronization		I (E-33 only)	—	I	—	I	
Evaporative emission control system (E-33 only)		—	—	I	—	I	
PAIR (air supply) system		—	—	I	—	I	
Throttle cable play		I	I	I	I	I	
Clutch cable play		—	I	I	I	I	
Radiator hoses		—	I	I	I	I	
Engine coolant		Replace every 2 years.					
Drive chain		I	I	I	I	I	
		Clean and lubricate every 1 000 km (600 miles).					
Brakes		I	I	I	I	I	
Brake hoses		—	I	I	I	I	
		Replace every 4 years.					
Brake fluid		—	I	I	I	I	
		Replace every 2 years.					
Tires		—	I	I	I	I	
Steering		I	—	I	—	I	
Front forks		—	—	I	—	I	
Rear suspension		—	—	I	—	I	
Exhaust pipe bolts and muffler bolt and nut		T	—	T	—	T	
Chassis bolts and nuts		T	T	T	T	T	

NOTE:

I = Inspect and clean, adjust, replace or lubricate as necessary; R = Replace; T = Tighten