

PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Mileages are expressed in terms of kilometers, miles and time for your convenience.

NOTE:

More frequent servicing may be required on motorcycles that are used under severe conditions.

PERIODIC MAINTENANCE CHART

Item	Interval	miles	600	4 000	7 500	11 000	14 500
		km	1 000	6 000	12 000	18 000	24 000
		months	2	12	24	36	48
Air cleaner element			—	I	I	R	I
Spark plug			—	I	R	I	R
Valve clearance			—	—	—	—	I
Engine oil			R	R	R	R	R
Engine oil filter			R	—	—	R	—
Fuel line			—	I	I	I	I
			Replace fuel hose every 4 years.				
Idle speed			I	I	I	I	I
Throttle valve synchronization			I (E-33 only)	—	I	—	I
Evaporative emission control system (E-33 only)			—	—	I	—	I
			Replace vapor hose every 4 years.				
PAIR (air supply) system			—	—	I	—	I
Throttle cable play			I	I	I	I	I
Clutch cable play			—	I	I	I	I
Radiator hose			—	I	I	I	I
			Replace every 4 years.				
Engine coolant			Replace every 2 years.				
Drive chain			I	I	I	I	I
			Clean and lubricate every 1 000 km (600 miles).				
Brake			I	I	I	I	I
Brake hose			—	I	I	I	I
			Replace every 4 years.				
Brake fluid			—	I	I	I	I
			Replace every 2 years.				
Tire			—	I	I	I	I
Steering			I	—	I	—	I
Front fork			—	—	I	—	I
Rear suspension			—	—	I	—	I
Exhaust pipe bolt and muffler bolt and nut			T	—	T	—	T
Chassis bolt and nut			T	T	T	T	T

NOTE:

I=Inspect and clean, adjust, replace or lubricate as necessary;

R=Replace; T=Tighten