



# Periodic Maintenance Schedule Chart

**NOTE:**
**I = Inspect and clean, adjust, replace or lubricate as necessary.**
**R = Replace.**
**T = Tighten.**

Item	Interval					
	km	1 000	6 000	12 000	18 000	24 000
	miles	600	4 000	7 500	11 000	14 500
	months	2	12	24	36	48
Air cleaner element	—	I	I	R	I	
Exhaust pipe bolts and muffler bolts	T	—	T	—	T	
Exhaust control valve	I	—	I	—	I	
Valve clearance	—	—	—	—	I	
Spark plugs	—	I	R	I	R	
Fuel line	—	I	I	I	I	
Evaporative emission control system (E-33 only)	—	—	I	—	I	
Engine oil	R	R	R	R	R	
Engine oil filter	R	—	—	R	—	
Throttle cable play	I	I	I	I	I	
PAIR (air supply) system	—	—	I	—	I	
Throttle valve synchronization	I (E-33 only)	—	I	—	I	
Engine coolant	Replace every 2 years.					
Radiator hose	—	I	I	I	I	
Clutch cable play	—	I	I	I	I	
Drive chain	I	I	I	I	I	
	Clean and lubricate every 1 000 km (600 miles).					
Brakes	I	I	I	I	I	
Brake fluid	—	I	I	I	I	
	Replace every 2 years.					
Brake hoses	—	I	I	I	I	
	Replace every 4 years.					
Tires	—	I	I	I	I	
Steering	I	—	I	—	I	
Front fork	—	—	I	—	I	
Rear suspension	—	—	I	—	I	
Chassis bolts and nuts	T	T	T	T	T	