

PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Mileages are expressed in terms of kilometers, miles and time for your convenience.

NOTE:

More frequent servicing may be required on motorcycles that are used under severe conditions.

PERIODIC MAINTENANCE CHART

Interval		km	1 000	5 000	10 000	15 000
		miles	600	3 000	6 000	9 000
		months	3	15	30	45
Item						
Air cleaner element			—	I	I	R
Exhaust pipe bolts and muffler bolts			T	—	T	—
Valve clearance			I	I	I	I
Spark plugs			—	I	R	I
Fuel line			—	I	I	I
Engine oil			R	R	R	R
Engine oil filter			R	—	R	—
Throttle cable play			I	I	I	I
Idle speed			I	I	I	I
PAIR (air supply) system			—	I	—	I
Engine coolant	SUZUKI SUPER LONG LIFE COOLANT (Blue)	Replace every 16 000 km (9 600 miles) or 48 months.				
	SUZUKI LONG LIFE COOLANT (Green) or other than SUZUKI SUPER LONG LIFE COOLANT (Blue)	Replace every 8 000 km (5 000 miles) or 24 months.				
Radiator hoses			—	I	I	I
Clutch cable play			I	I	I	I
Drive chain			I	I	I	I
		Clean and lubricate every 1 000 km (600 miles).				
Brakes			I	I	I	I
Brake fluid			—	I	I	I
		Replace every 2 years.				
Brake hoses			—	I	I	I
		Replace every 4 years.				
Tires			—	I	I	I
Steering			I	—	I	—
Front forks			—	—	I	—
Rear suspension			—	—	I	—
Chassis bolts and nuts			T	T	T	T

NOTE:

I = Inspect and clean, adjust, replace or lubricate as necessary, R = Replace, T = Tighten