



Periodic Maintenance Schedule Chart

NOTE:

I = Inspect and clean, adjust, replace or lubricate as necessary.

R = Replace.

T = Tighten.

– L4

Item	Interval					
	months	2	12	24	36	48
	km	1 000	6 000	12 000	18 000	24 000
	miles	600	4 000	7 500	11 000	14 500
Air cleaner element	—	I	I	R	I	I
Exhaust pipe bolts and muffler bolts	T	—	T	—	T	T
Valve clearance	—	—	—	—	—	I
Spark plugs	—	I	R	I	R	R
Fuel line	—	I	I	I	I	I
Evaporative emission control system (E-33, 38, 73)	—	—	I	—	I	I
Engine oil	R	R	R	R	R	R
Engine oil filter	R	—	—	R	—	—
Throttle cable play	I	I	I	I	I	I
Throttle valve synchronization	I (E-33 only)	—	I	—	I	I
Engine coolant	Replace every 2 years.					
Radiator hose	—	I	I	I	I	I
Clutch cable play	—	I	I	I	I	I
Drive chain	I	I	I	I	I	I
	Clean and lubricate every 1 000 km (600 miles).					
Brakes	I	I	I	I	I	I
Brake fluid	—	I	I	I	I	I
	Replace every 2 years.					
Brake hose	—	I	I	I	I	I
	Replace every 4 years.					
Tires	—	I	I	I	I	I
Steering	I	—	I	—	I	I
Front forks	—	—	I	—	I	I
Rear suspension	—	—	I	—	I	I
Chassis bolts and nuts	T	T	T	T	T	T

L5 –

For Europe and Oceania countries

Item	Interval					
	months	2	12	24	36	48
	km	1 000	12 000	24 000	36 000	48 000
	miles	600	7 500	15 000	22 500	30 000
Air cleaner element	—	I	I	R	I	I
Exhaust pipe bolts and muffler bolts	T	T	T	T	T	T

Valve clearance		Inspect every 24 000 km (15 000 miles).				
Spark plugs		—	I	R	I	R
Fuel hose		—	I	I	I	I
Engine oil		R	R	R	R	R
Engine oil filter		R	—	R	—	R
Throttle cable play		I	I	I	I	I
Throttle valve synchronization		—	I	I	I	I
Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (BLUE)	—	—	—	—	R
	"SUZUKI LONG LIFE COOLANT" (GREEN) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (BLUE)	—	—	R	—	R
Radiator hose		—	I	I	I	I
Clutch cable play		—	I	I	I	I
Drive chain		I	I	I	I	I
		Clean and lubricate every 1 000 km (600 miles).				
Brakes		I	I	I	I	I
Brake fluid		Inspect every year or 6 000 km (4 000 miles). Replace every 2 years.				
Brake hose		—	I	I	I	I
		Replace every 4 years.				
Tires		—	I	I	I	I
Steering		I	I	I	I	I
Front forks		—	I	I	I	I
Rear suspension		—	I	I	I	I
Chassis bolts and nuts		T	T	T	T	T
Lubrication		Lubricate at every 1 000 km (600 miles).				