

# Periodic Maintenance Schedule Chart


**NOTE:**

I = Inspect and clean, adjust, replace or lubricate as necessary.

R = Replace.

T = Tighten.

The word E.U. below also include New Zealand, Hong Kong, Middle East and Korea.

## Except for E.U.

Interval	months	1	6	12
	km	1000	4000	8000
Air cleaner element →		—	I	I
		Replace every 12000 km		
Exhaust pipe nuts and muffler mounting bolts →		T	—	T
Valve clearance →		I	I	I
Spark plug →		—	I	R
Fuel hose →		—	I	I
		Replace every 4 years		
Evaporative emission control system →		—	—	I
Engine oil →		R	R	R
Oil strainer →		I	—	I
Gear oil →		—	—	R
Throttle cable play →		I	I	I
Idle speed →		I	I	I
Drive belt →		—	I	I
		Replace every 20000 km		
Clutch shoe →		—	I	I
Brakes →		I	I	I
Brake hose →		—	I	I
		Replace every 4 years		
Brake fluid →		—	I	I
		Replace every 2 years		
Tires →		—	I	I
Steering →		I	—	I
Front forks →		—	—	I
Rear suspension →		—	—	I
Chassis bolts and nuts →		T	T	T
Lubrication →		Lubricate every 1000 km		

## For E.U.

Interval	months	2	12	24
	km	1000	4000	8000
	miles	600	2400	4800
Air cleaner element →		—	I	I
		Replace every 12000 km (7200 miles)		
Exhaust pipe nuts and muffler mounting bolts →		T	—	T
Valve clearance →		I	I	I
Spark plug →		—	I	R
Fuel hose →		—	I	I
		Replace every 4 years		
Evaporative emission control system →		—	—	I

Engine oil →	R	R	R
Oil strainer →	I	—	I
Gear oil →	—	—	R
Throttle cable play →	I	I	I
Idle speed →	I	I	I
Drive belt →	—	I	I
	Replace every 20000 km (12000 miles)		
Clutch shoe →	—	I	I
Brakes →	I	I	I
Brake hose →	—	I	I
	Replace every 4 years		
Brake fluid →	—	I	I
	Replace every 2 years		
Tires →	—	I	I
Steering →	I	—	I
Front forks →	—	—	I
Rear suspension →	—	—	I
Chassis bolts and nuts →	T	T	T
Lubrication →	Lubricate every 1000 km (600 miles)		