
 

 



 




 





















# Periodic Maintenance Schedule Chart

**NOTE:**
**I = Inspect and clean, adjust, replace or lubricate as necessary.**
**R = Replace.**
**T = Tighten.**

## UH200/A

| Interval   |  | months  | 2    | 12   | 24    | 36    |
|--|--|---|------|------|-------|-------|
|  |  | km  | 1000 | 5000 | 10000 | 15000 |
|  |  | miles   | 600  | 3000 | 6000  | 9000  |
| Air cleaner element (I:  , R:  ) | Polyurethane foam element  | Clean every 3000 km (2000 miles)                  |      |      |       |       |
|  | Non-woven fabric element   | —   | I    | I    | R     |       |
| Cooling fan filter (I:  )   |  | Clean every 3000 km (2000 miles)                  |      |      |       |       |
| Exhaust pipe nuts and muffler mounting bolts (T:  )   |  | T   | T    | T    | T     |       |
| Valve clearance (I:  )  |  | I   | I    | I    | I     |       |
| Spark plug (I:  , R:  )          |  | —   | I    | R    | I     |       |
| Fuel hose (I:  , R:  )           |  | —   | I    | I    | I     |       |
|  |  | Replace every 4 years. (Except for California)    |      |      |       |       |
| EVAP control system (If equipped) (I:  )  |  | —   | —    | I    | —     |       |
| Engine oil (R:  )   |  | R   | R    | R    | R     |       |
| Engine oil filter (R:  )  |  | R   | —    | R    | —     |       |
| Final gear box oil (I:  )   |  | —   | —    | I    | —     |       |
| Throttle cable play (I:  )  |  | I   | I    | I    | I     |       |
| Cooling system (I:  )   |  | —   | I    | I    | I     |       |
| Engine coolant (R:  )   | "SUZUKI SUPER LONG LIFE COOLANT" (Blue)  | Replace every 48 months or 20000 km (12000 miles) |      |      |       |       |
|  | "SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue) | Replace every 24 months or 10000 km (6000 miles)  |      |      |       |       |
| Radiator hose (I:  )  |  | —   | I    | I    | I     |       |
| Drive belt (I:  , R:  )      |  | —   | I    | I    | R     |       |
| Brakes (I:  )   |  | I   | I    | I    | I     |       |
| Brake fluid (I:  , R:  )     |  | —   | I    | I    | I     |       |
|  |  | Replace every 2 years.                            |      |      |       |       |
| Brake hose (I:  , R:  )      |  | —   | I    | I    | I     |       |
|  |  | Replace every 4 years.                            |      |      |       |       |
| Tires (I:  )  |  | —   | I    | I    | I     |       |
| Steering (I:  )   |  | I   | —    | I    | —     |       |
| Front forks (I:  )  |  | —   | —    | I    | —     |       |
| Rear suspension (I:  )  |  | —   | —    | I    | —     |       |
| Chassis bolts and nuts (T:  )   |  | T   | T    | T    | T     |       |
| Lubrication (I:  )  |  | Lubricate every 1000 km (600 miles)               |      |      |       |       |