























 




Periodic Maintenance Schedule Chart

NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

Interval	months	2	12	24
	km	1000	4000	8000
	miles	600	2500	5000
Air cleaner element (I:  , R: )	—	I	I	
	Replace every 12000 km (7500 miles)			
Cooling fan filter (I: )	Clean every 4000 km (2500 miles)			
Exhaust pipe nuts and muffler mounting bolts (T: )	T	—	T	
Valve clearance (I: )	I	I	I	
Spark plug (I:  , R: )	—	I	R	
Fuel hose (I: )	—	I	I	
Engine oil (R: )	R	R	R	
Engine oil filter (R: )	R	—	R	
Final gear box oil (R: )	—	—	R	
Throttle cable play (I: )	I	I	I	
Drive belt (I:  , R: )	—	I	I	
	Replace every 20000 km (12000 miles)			
Brakes (I: )	I	I	I	
Brake fluid (I:  , R: )	—	I	I	
	Replace every 2 years			
Brake hose (I:  , R: )	—	I	I	
	Replace every 4 years			
Tires (I: )	—	I	I	
Steering (I: )	I	—	I	
Front fork (I: )	—	—	I	
Rear suspension (I: )	—	—	I	
Chassis bolts and nuts (T: )	T	T	T	
Lubrication (I: )	Lubricate at every 1000 km (600 miles)			