

Periodic Maintenance Schedule Chart


NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

Interval	months	2	12	24
	km	1000	4000	8000
	miles	600	2400	4800
Air cleaner element	—	I	I	Replace every 12000 km (7200 miles).
Exhaust pipe nuts and muffler support bolts	T	—	T	
Valve clearance	I	I	I	
Spark plug	—	I	R	
Fuel hoses	—	I	I	Replace every 4 years.
Evaporative emission control system	—	—	I	
Engine oil	R	R	R	
Oil strainer	I	—	I	
Gear oil	—	—	R	
Throttle cable play	I	I	I	
Idle speed	I	I	I	
Drive belt	—	I	I	Replace every 20000 km (12000 miles).
Clutch shoe	—	I	I	
Brakes	I	I	I	
Brake hose	—	I	I	Replace every 4 years.
Brake fluid	—	I	I	
Tires	—	I	I	Replace every 2 years.
Steering	I	—	I	
Front forks	—	—	I	
Rear suspension	—	—	I	
Chassis bolts and nuts	T	T	T	
Lubrication	Lubricate every 1000 km (600 miles).			