

PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Mileages are expressed in terms of kilometer and time for your convenience.

NOTE:

More frequent servicing may be performed on motorcycles that are used under severe conditions.



PERIODIC MAINTENANCE CHART

Item		Interval	1 000	4 000	8 000
		km	600	2 500	5 000
		miles	5	20	40
Air cleaner element	Polyurethane foam element	Clean every 3 000 km. (2 000 miles)			
	Paper element	—	I	I	
		Replace every 12 000 km. (7 000 miles)			
Cooling fan filter		Clean every 3 000 km. (2 000 miles)			
Exhaust pipe nuts and muffler mounting bolts		T	—	T	
Valve clearance		I	I	I	
Spark plug		—	I	R	
Fuel line		—	I	I	
Engine oil		R	R	R	
Engine oil filter		R	—	R	
Final reduction gear box oil		—	—	I	
Throttle cable play		I	I	I	
Engine coolant		Replace every two years.			
Radiator hose		—	I	I	
Drive belt		—	I	I	
Brakes		I	I	I	
Brake fluid		—	I	I	
		Replace every two years.			
Brake hose		—	I	I	
		Replace every four years.			
Tires		—	I	I	
Steering		I	—	I	
Front fork		—	—	I	
Rear suspension		—	—	I	
Chassis bolt and nut		T	T	T	
Lubrication		I	I	I	

NOTE:

I = Inspect and adjust, clean, lubricate or replace as necessary

R = Replace

T = Tighten