

























Periodic Maintenance Schedule Chart

NOTE:
I = Inspect and clean, adjust, replace or lubricate as necessary.
R = Replace.
T = Tighten.

Interval	months	2	12	24
	km	1000	4000	8000
	miles	600	2400	4800
Air cleaner element 	—	I	I	Replace every 12000 km (7200 miles)
Exhaust pipe nuts and muffler mounting bolts 	T	—	T	
Valve clearance 	I	I	I	
Spark plug 	—	I	R	
Fuel hoses 	—	I	I	Replace every 4 years
Evaporative emission control system 	—	—	I	
Engine oil 	R	R	R	
Oil strainer 	I	—	I	
Gear oil 	—	—	R	
Throttle cable play 	I	I	I	
Idle speed 	I	I	I	
Drive belt 	—	I	I	Replace every 20000 km (12000 miles)
Clutch shoe 	—	I	I	
Brakes 	I	I	I	
Brake hose 	—	I	I	Replace every 4 years
Brake fluid 	—	I	I	
Tires 	—	I	I	Replace every 2 years
Steering 	I	—	I	
Front forks 	—	—	I	
Rear suspension 	—	—	I	
Chassis bolts and nuts 	T	T	T	
Lubrication 	Lubricate every 1000 km (600 miles)			